


220-240V / 50-60Hz Eyelid – IK10 Grille/Open – IK08
IP65

Terminal Labelling:	
Power	
L / 1	Switched Live
E / 0	Earth
N	Neutral
Emergency	
L2 / 2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
-/D1/DA	Analogue/DSI/DALI
+/D2/DA	Analogue/DSI/DALI
SD	Switch Dim / Corridor Function

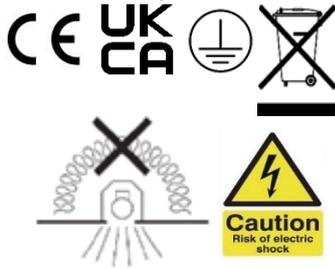

WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

1.

Remove the three screws from the front of the luminaire and carefully remove the outer ring and diffuser. Set to one side carefully.

2.

Remove the four screws from the gear tray outer rim and set aside safely.

3.

Lower the gear tray down on its tether.

NOTE: Care must be taken not to damage the gear when the tray is lowered.

4.

Attach the housing to the designated wall or ceiling using 2no. Screws and suitable rubber washers through the holes shown.

NOTE: If IP65 rated, failure to seal these holes will invalidate the warranty.

5.

Feed the cable in through the hole in the rear of the luminaire housing. To retain its IP65 rating, the gland must remain securely in place.

NOTE: It is the contractor's responsibility to ensure the cable has been sealed in the drilled hole to retain its IP65 rating. Failure to do so will invalidate the warranty.

6. Reverse steps 1 to 3 to replace tray, diffuser and outer ring

Eyelid Grille Open

Amenity Exterior Installation

Maintenance

- 1 Disconnect luminaire before undertaking any maintenance or cleaning.
- 2 Cleaning should be undertaken on external parts of the luminaire only using a slightly damp lint free cloth.
- 3 Using a pan pozi screwdriver remove all screws from cover to access fitting.
- 4 Use a pan pozi screwdriver to remove tray and components.
- 5 Please contact Dextra for assistance with spare component supply.

