

220-240V / 50-60Hz
IP65



WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

LUMINAIRES WITH EMERGENCY PACK: When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

Terminal Labelling:	
Power	
L1	Switched Live
E	Earth
N	Neutral
Emergency	
L2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
-/D1/DA	Analogue/DSI/DALI
+/D2/DA	Analogue/DSI/DALI
L3	Switch Dim / Corridor Function

<p>1.</p> <p>Remove the four screws from the front of the luminaire and carefully remove the diffuser and set to one side.</p>	<p>2.</p> <p>Unscrew the four screws holding the gear tray in and carefully remove.</p>
<p>3.</p> <p>Feed the cable in through a drilled hole in the rear of the luminaire housing.</p> <p>NOTE: It is the contractor's responsibility to ensure the cable has been sealed in the drilled hole to retain its IP65 rating. Failure to do so will invalidate the warranty.</p>	<p>4.</p> <p>Attach the housing to the designated wall or ceiling using 4no. Screws through the holes shown.</p> <p>NOTE: Failure to seal these holes will invalidate the warranty.</p>
<p>5.</p> <p>Wire the cable into the terminal block(s) provided and carefully reattach the gear tray using the same four screws as before.</p>	<p>6.</p> <p>Reattach the diffuser using the initial four screws. Ensure no cables or wires are trapped when reattaching.</p>

Amenity Decorative IP65 Installation

Maintenance

- 1 Disconnect luminaire before undertaking any maintenance or cleaning.
- 2 Cleaning should be undertaken on external parts of the luminaire only using a slightly damp lint free cloth.
- 3 Remove 4 screws from the front of the fitting using a pan pozi screwdriver.
- 4 Using the same screwdriver remove the 4 screws to remove gear tray from housing.
- 5 To remove components use a pan pozi screwdriver.
- 6 Please contact Dextra for assistance with spare component supply.

