

220-240V / 50-60Hz




Terminal Labelling:

Power
 L1 Switched Live
 E Earth
 N Neutral


Emergency
 L2 Unswitched Live
 DA/AT3 DALI Autotest

Dimming
 -/D1/DA Analogue/DSI/DALI
 +/D2/DA Analogue/DSI/DALI
 L3 Switch Dim / Corridor Function

WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

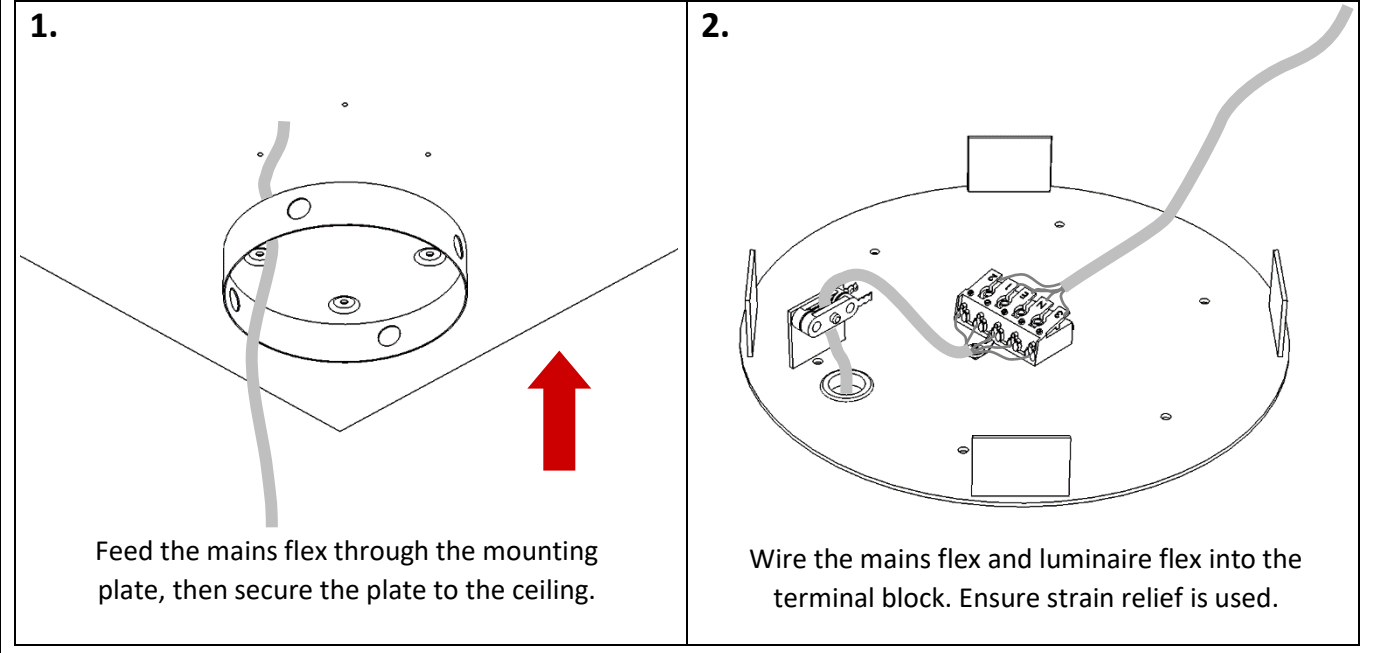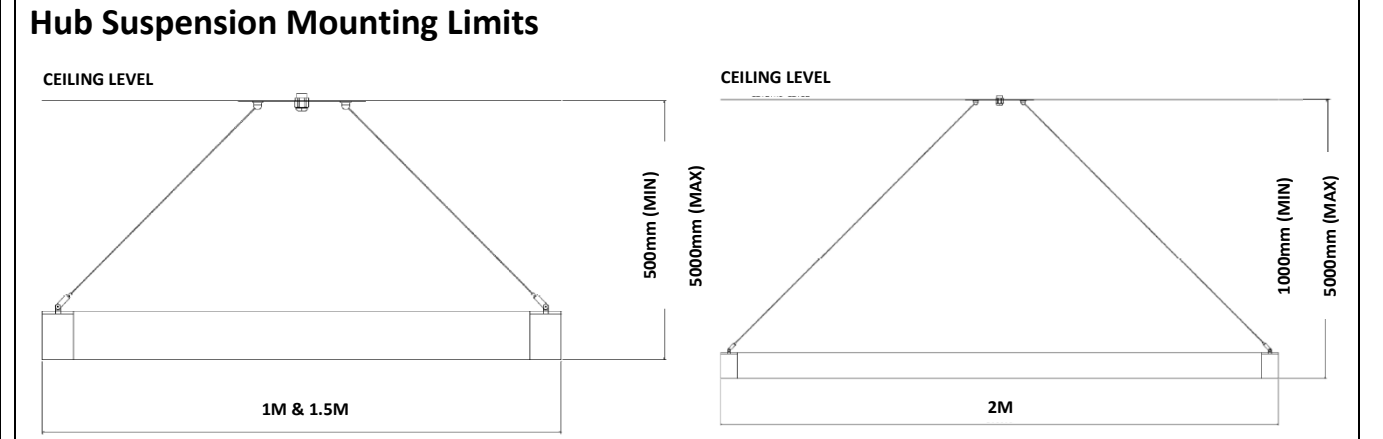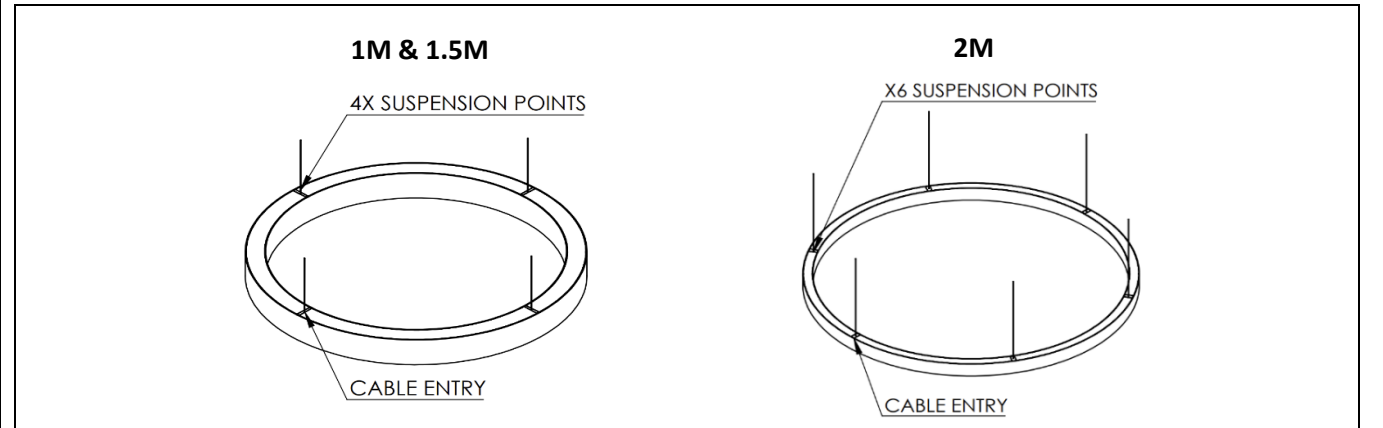


3.

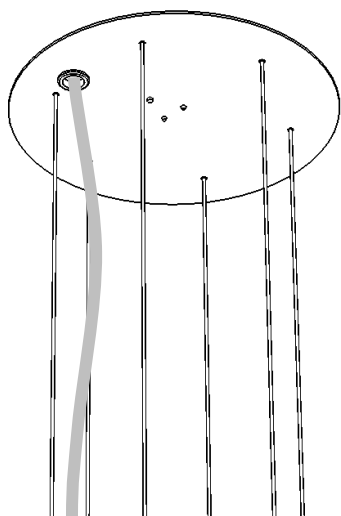


Attach the suspension points.

4.

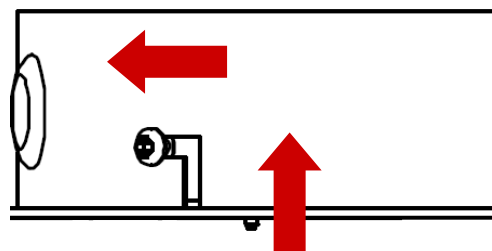


Offer the hub up to the mounting plate, align screws with slots, push up and turn anti-clockwise. Then, fasten the screws fully to lock in place.

5.

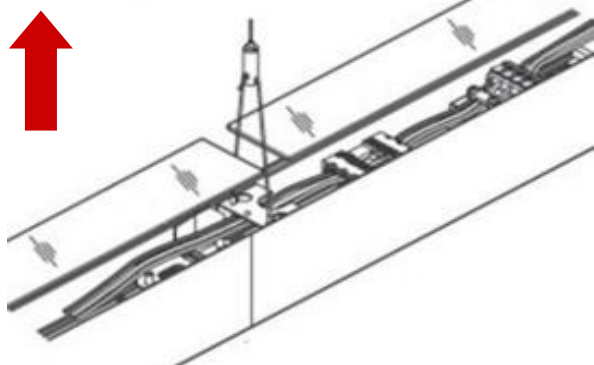


Remove rear diffusers to access terminals and suspension bracket. Then fit the suspensions.

6.

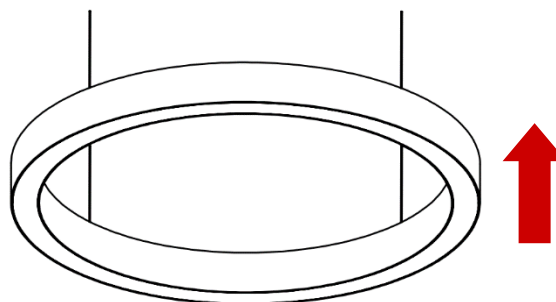


Lift the luminaire into place and level, ensuring each suspension cable is under tension. Trim the excess suspension cable.

7.

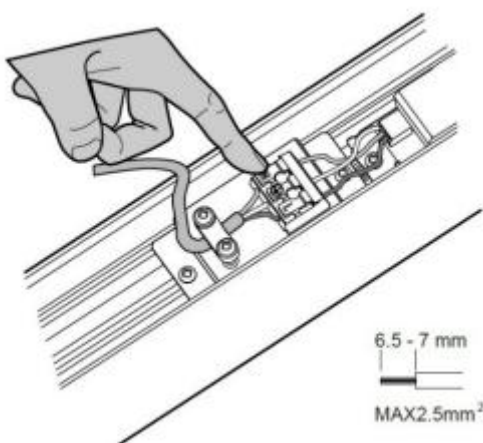


Once in place, wire the flex into the terminals, using a cable clamp to secure.

220-240V AC. 50 Hz

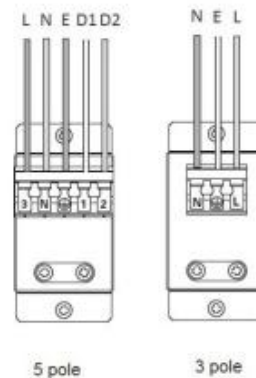


8.

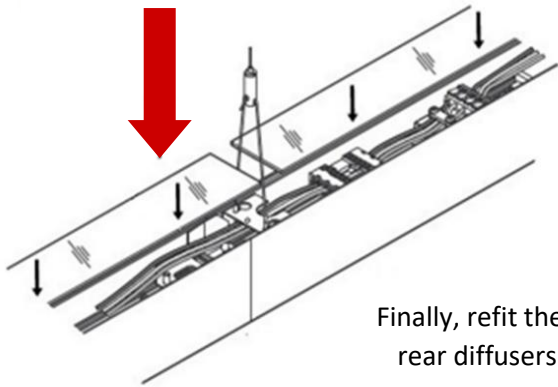


Finally, refit the rear diffusers.

NOTE WHEN INSTALLING MICROPRISM DIFFUSER

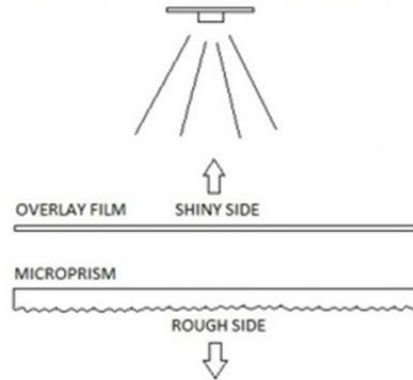


Maintenance Guide


1. Disconnect the luminaire before undertaking any maintenance or cleaning.
2. Cleaning should be undertaken on external parts of the luminaire only, using a slightly damp, lint-free cloth.
3. Remove front and rear diffusers to access LED circuit, driver and terminals.

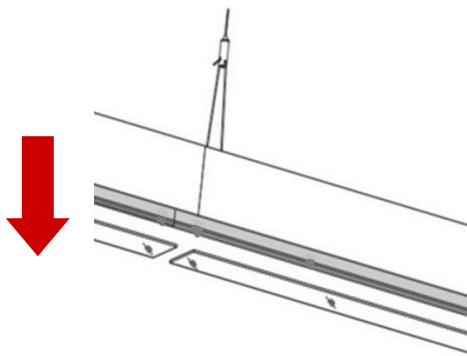

FRONT DIFFUSER

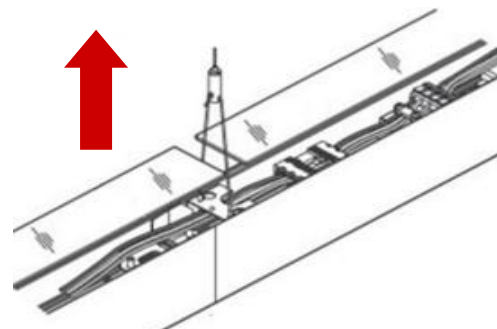

REAR DIFFUSER

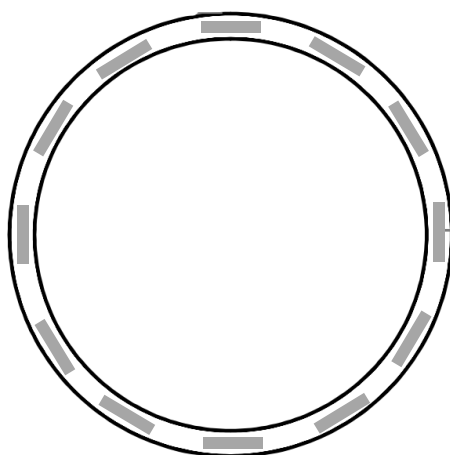


FRONT

DRIVER

LED CIRCUIT

REAR LED CIRCUIT

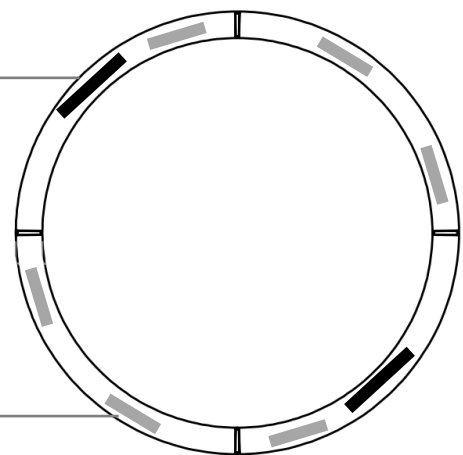

REAR