RTEC Installation

220-240V / 50-60Hz
IP40

Terminal Labelling:

Power	
L / 1	Switched Live
E / ⏚	Earth
N	Neutral
Emergency	
L2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
DA+/D2	Analogue/DSI/DALI
DA-/D1	Analogue/DSI/DALI
SD	Switch Dim / Corridor Function

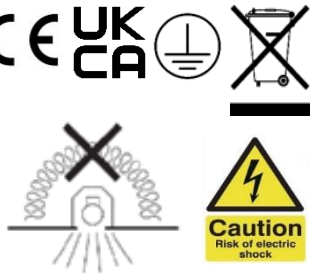

WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person**. LUMINAIRES WITH EMERGENCY PACK**: When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries. Lithium iron phosphate batteries must be replaced with identical make and model.

1.

Standard Fitting

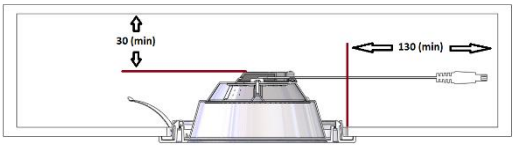

Emergency Fitting – due to emergency gear box

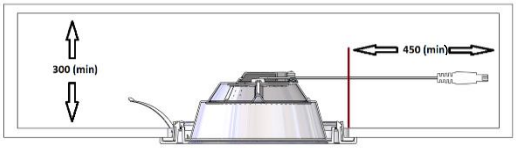

2.

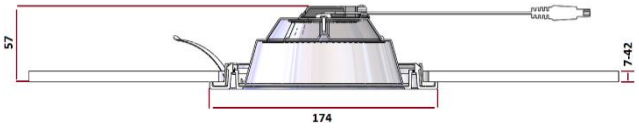

Cut-out 160mm

3. Emergency remote Box

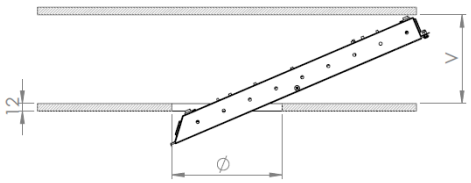

Ø (Hole diameter)	V (minimum void depth)
135Ø	275mm
145Ø	230mm
160Ø	175mm
175Ø	140mm
190Ø	125mm
205Ø	110mm

Note: void depths are based on a 12mm thick tile

4.

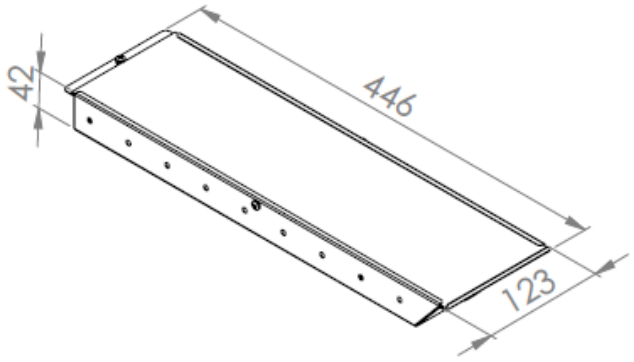

5.

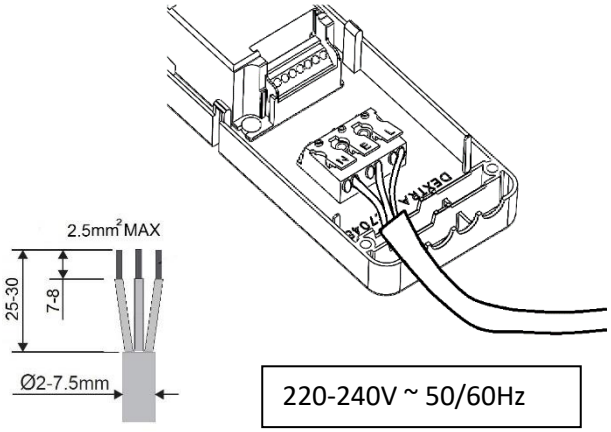

220-240V ~ 50/60Hz

6.

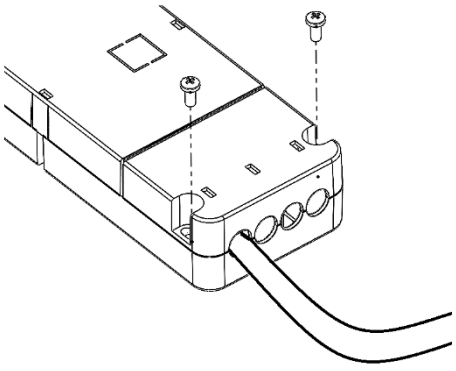

7.

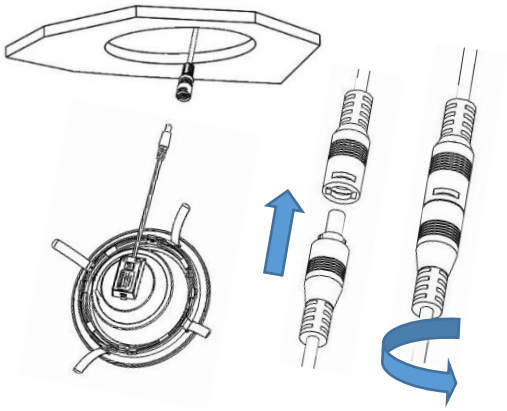

8.

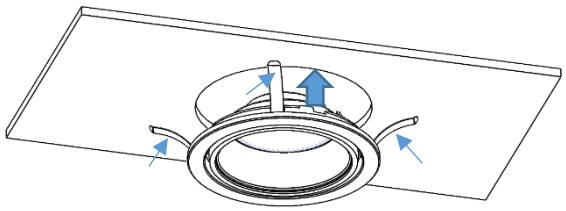

Maintenance
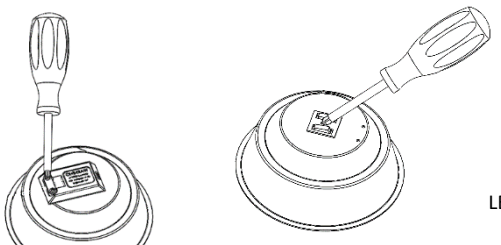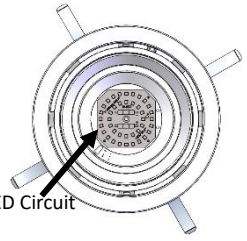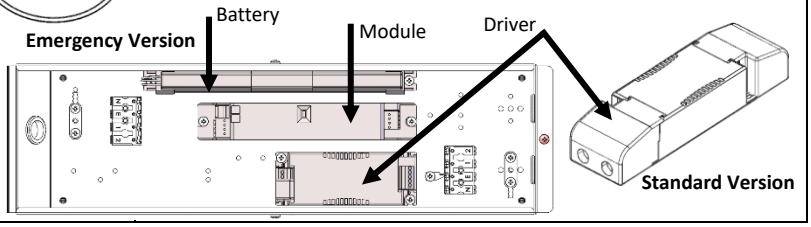
1. Disconnect luminaire before undertaking any maintenance or cleaning.
2. Cleaning should be undertaken on external parts of the luminaire only using a slightly damp lint fee cloth.
3. Remove x2 screws from top of fitting using a pan pozi screwdriver.
4. Using the same screwdriver remove the screw from the centre of the fitting. The diffuser and LED circuit can then be removed.
5. To remove emergency gear use a pan pozi screwdriver.
6. Standard driver is maintainable.
7. Please contact Dextra for assistance with spare component supply.