

220-240V / 50-60Hz  
IP65 IK10

## Terminal Labelling:

### Power

L1 Switched Live  
E Earth  
N Neutral

### Emergency

L2 Unswitched Live  
DA/AT3 DALI Autotest  
DA/AT3 DALI Autotest

### Dimming

-D1/DA Analogue/DSI/DALI  
+D2/DA Analogue/DSI/DALI  
L3 Switch Dim / Corridor Funct




**WARNING:** Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

For installation into Burgess Spring Tee, an additional frame and support rails must be used. Order luminaire with the suffix "SP".


Follow steps 12 – 14 when installing the fitting into Spring Tee ceiling. Continue to adjust flag brackets and wire as per main instructions.

1.

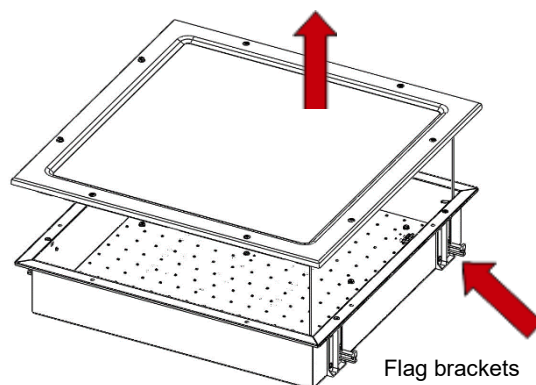


Remove diffuser by loosening each of the 8 retaining screws.

2.

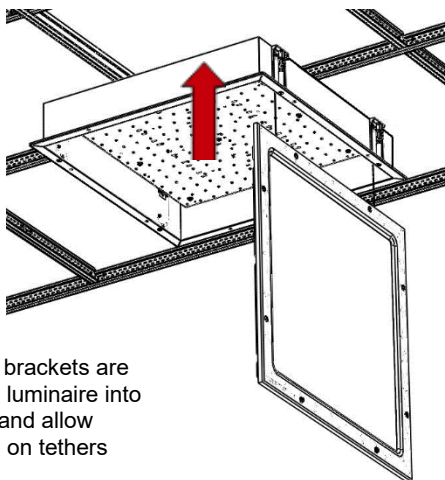


Ensure the flag brackets are folded in. Insert luminaire into the ceiling grid and allow diffuser to hang on tethers

3.

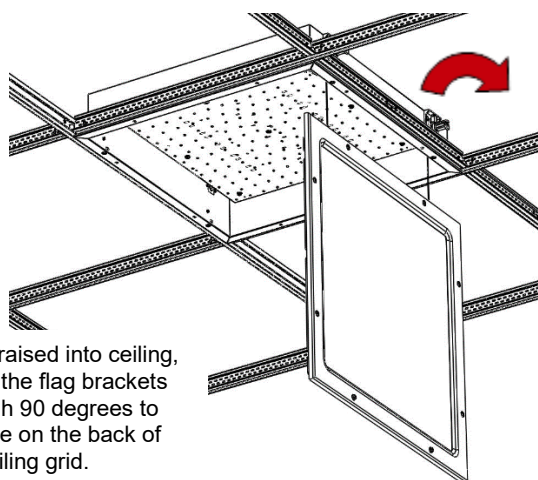


Once raised into ceiling, rotate the flag brackets through 90 degrees to engage on the back of the ceiling grid.

4.

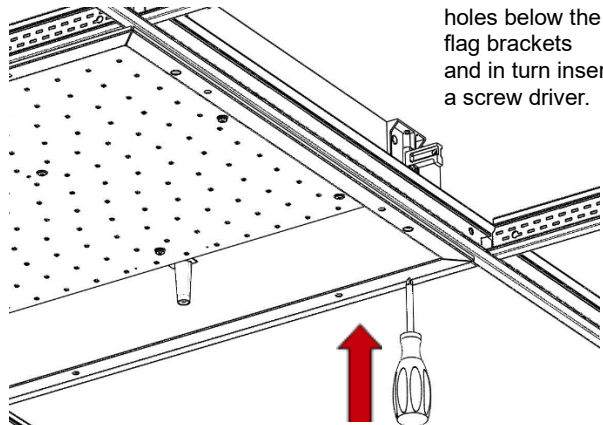


Locate the 4 holes below the flag brackets and in turn insert a screw driver.

5.

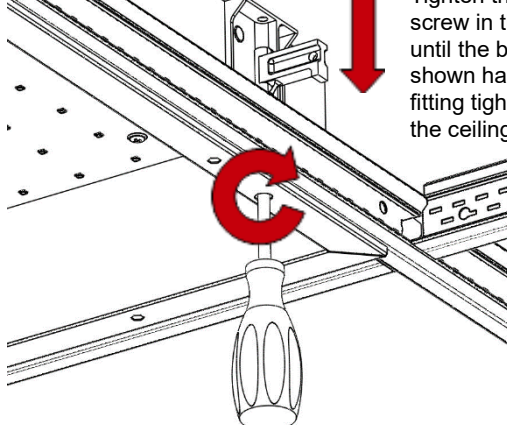


Tighten the clamp screw in the bracket until the bracket shown has pulled the fitting tight up against the ceiling grid.

6.

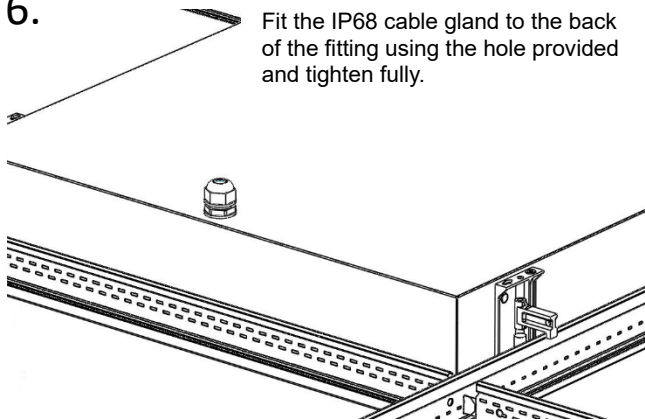


Fit the IP68 cable gland to the back of the fitting using the hole provided and tighten fully.

7.

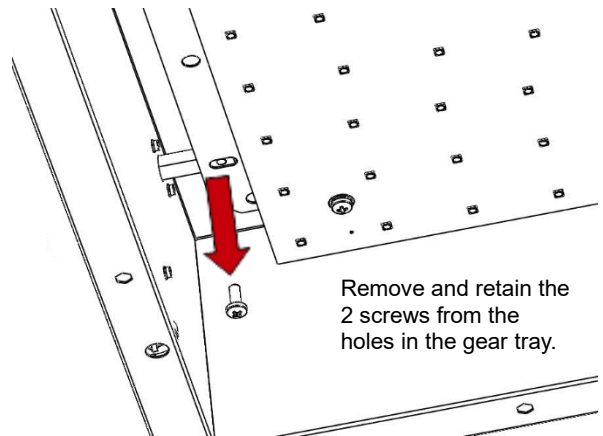


Remove and retain the 2 screws from the holes in the gear tray.

8.

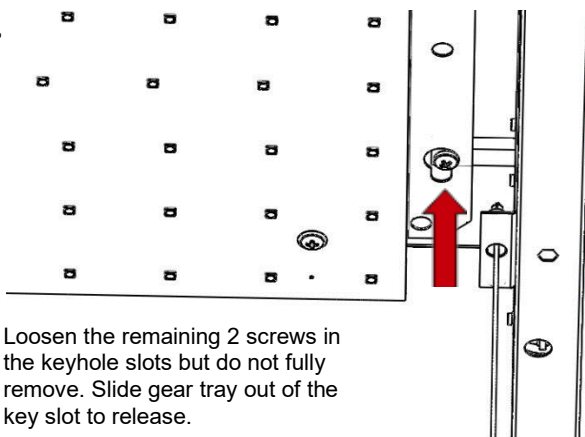

Loosen the remaining 2 screws in the keyhole slots but do not fully remove. Slide gear tray out of the key slot to release.


9.

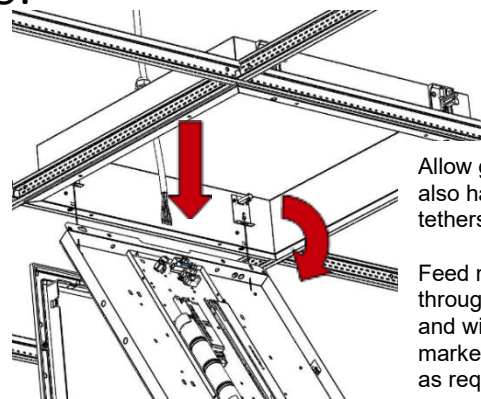

Allow gear tray to also hang on its tethers.

Feed mains cable through IP68 gland and wire into marked terminals as required.


10.

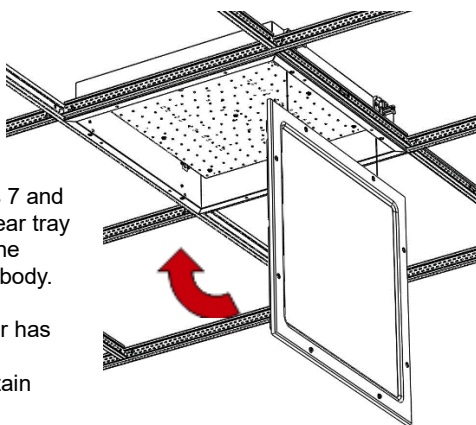

Reverse steps 7 and 8 to replace gear tray and reattach the diffuser to the body.


Ensure diffuser has been securely attached to retain IP65 rating.

11.

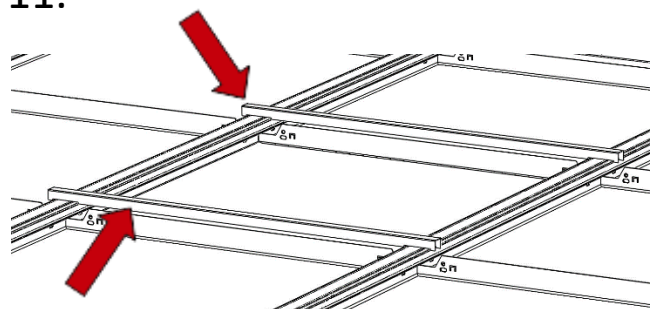


SP rails placed across Spring Tee bars as shown.

12.

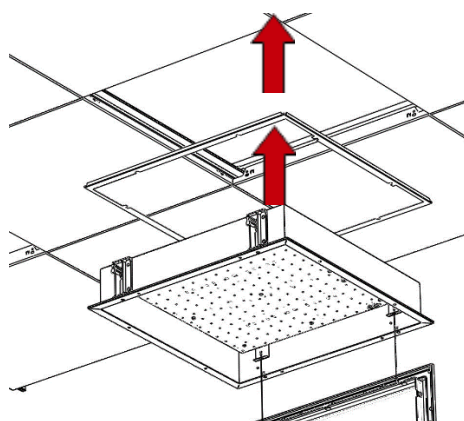


SP frame to be installed before luminaire is lifted into ceiling grid.

13.

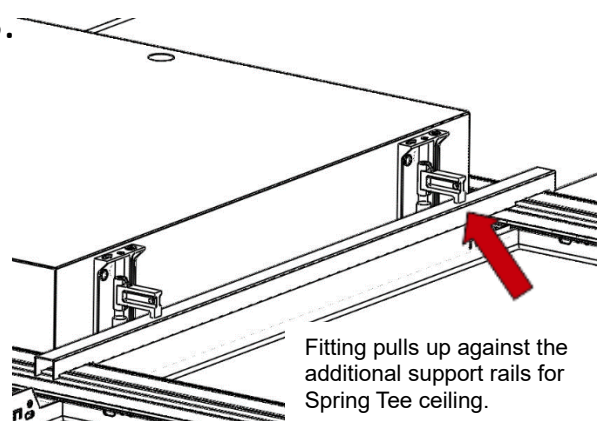

Fitting pulls up against the additional support rails for Spring Tee ceiling.

## 14. IMPR65 RWT82765 - WIRING

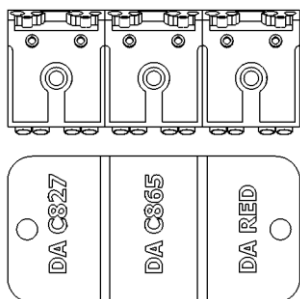

X3 DALI terminals supplied for each colour pre-marked for ease of wiring.

## 15.

**Caution:** All red, green and blue can be run at the same time, however white can only be run with one additional colour. The fitting must not run all 4 colours at the same time. Drivers come programmed to prevent operation above 50% output when not connected to DALI system, however commissioning will reset these values, we strongly recommend these values are programmed during commissioning to prevent overheating should the DALI system fail.

Under no circumstances should the LEDs in this luminaire be viewed directly, only illuminate this product with the diffuser installed. Directly viewing the LEDs in this luminaire has the potential to damage eyesight.

### Maintenance

- ① Disconnect luminaire before undertaking any maintenance or cleaning.
- ② Cleaning should be undertaken on external parts of the luminaire only using a slightly damp lint free cloth.
- ③ To remove frame use a pan pozi screwdriver.
- ④ Use a pan pozi screwdriver when removing components.
- ⑤ Please contact Dextra for assistance with spare component supply.

