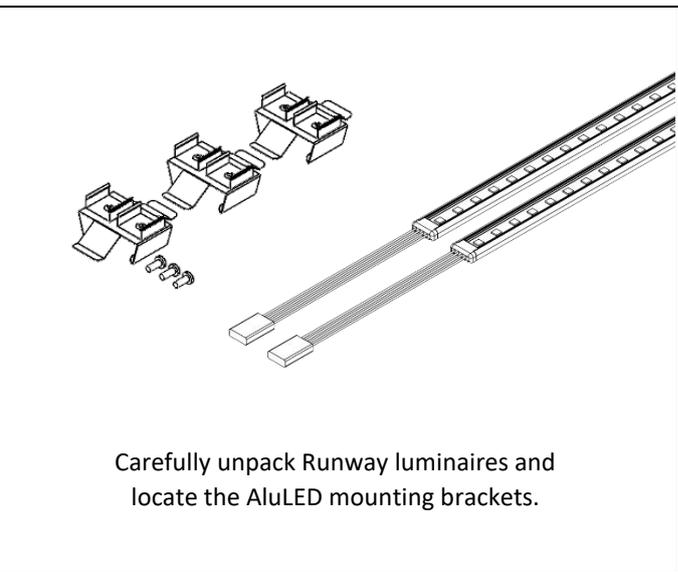
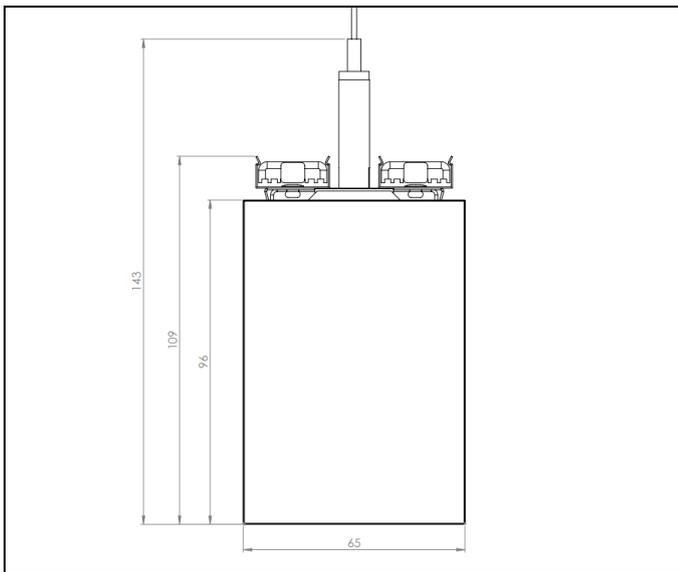


220-240V / 50-60Hz
IP20



Terminal Labelling:	
Power	
L / 1	Switched Live
E / ⊕	Earth
N	Neutral
Emergency	
L2 / 2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
-/D1/DA	Analogue/DSI/DALI
+/D2/DA	Analogue/DSI/DALI
SD	Switch Dim / Corridor Function

WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source is non replaceable. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.



1. Snap the mounting brackets onto the trunking and position as required.

Note: 3 brackets are required per AluLED section

2. Once in position, tighten the M4 screw in the bracket to secure in place.

Tighten screw with sufficient force to break paint and ensure earth contact.

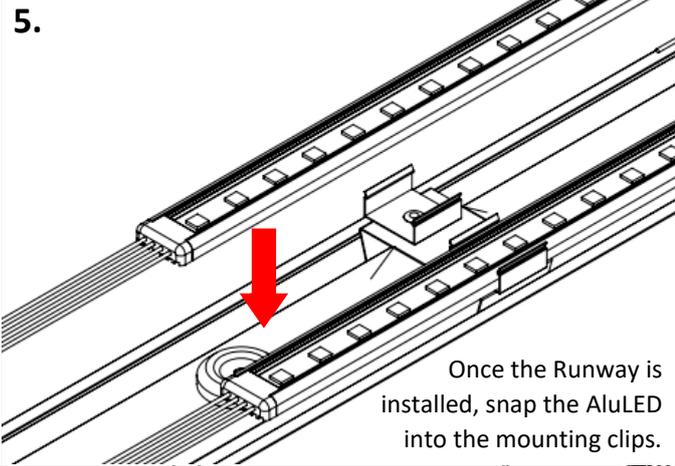
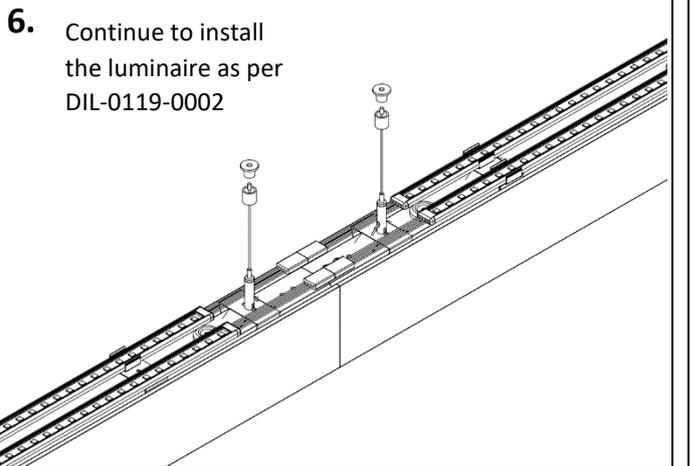
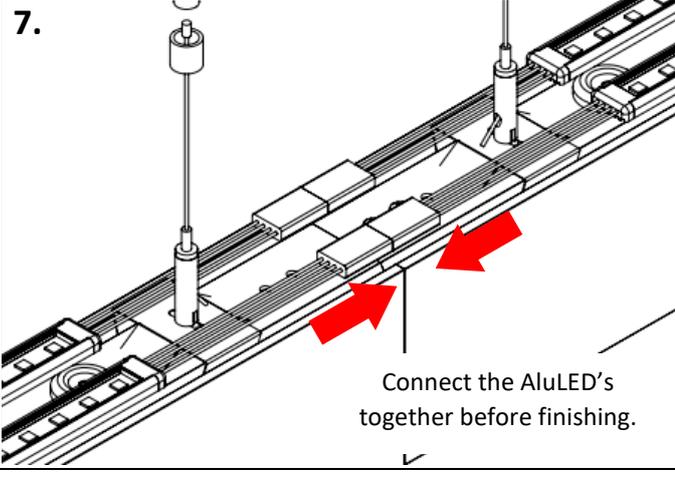
3. The supplied starter lead is 250mm. The installer must extend the starter lead, if the driver location exceeds this distance.

4.

Control System — 3/4 Channel Controller — 24V Constant Voltage PSU — Mains 230V

Refer to the wiring diagram for driver electrical connection.

AluLED Installation on Runway

<p>5.</p>  <p>Once the Runway is installed, snap the AluLED into the mounting clips.</p>	<p>6.</p> <p>Continue to install the luminaire as per DIL-0119-0002</p> 
<p>7.</p>  <p>Connect the AluLED's together before finishing.</p>	<p>8.</p> <p>The installer must follow the wiring diagram supplied and ensure the load from each starter lead does NOT exceed 72W.</p> <p><i>Note: There may be 1 or 2 AluLED sections per Runway depending on the installation.</i></p>